




Replacement Downrod Installation Instructions


1.) Remove ball from existing downrod:

- Loosen jam screw on side of ball
- Slide the ball downward to expose the ball's cross-pin
- Remove the ball's cross-pin from the downrod
- Slide the ball off of the downrod.

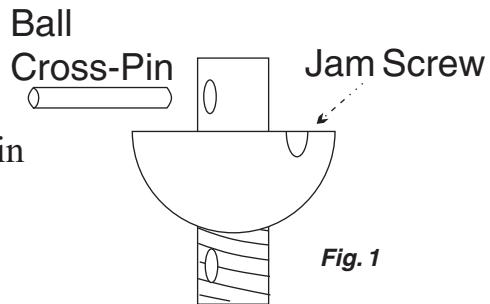

2.) Replace ball onto replacement downrod:

- Slide ball onto downrod past holes
- Insert ball's cross-pin through holes in downrod
- Raise ball so that cross-pin seats down into cavity in ball
- Re-tighten jam screw in ball to secure ball to downrod with cross-pin held in place

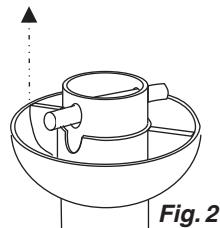

3.) Install downrod onto fan as shown in fan assembly instructions:

- Insert the downrod through the fan's canopy and yoke cover
- Feed the fan's wires through the downrod
- Insert the downrod into the yoke of the fan
- Insert the Cross-Pin through the yoke and downrod
- Insert the Cotter-Pin into the small hole in the cross-pin.
- Tighten jam screws in yoke to secure downrod onto fan.
- Slide the yoke cover down the downrod to cover the fan's yoke

